



# PRESSURE WASHER

PEPW-2000, 2500

OWNERS MANUAL

This manual has been produced by Parker Products Ltd. and should be kept with the product and referenced for operation, maintenance and troubleshooting.

This manual contains an overall description of the product, together with all the necessary information for using the product correctly and safely. It is highly recommended that this manual is read prior to any operation or maintenance of this product. The safety precautions and warnings are to ensure your safety and protect you from harm or damage to the product.


All photographs and drawings in this manual are supplied by Parker Products Ltd. to help you with the operation and maintenance of the product. The information contained in this manual was accurate at the time of production, however Parker Products Ltd. may make modifications to the product without notification. This Table Saw has been designed for personal and private use only.

The product is to be used only for its prescribed purpose, any other use is deemed to be a case of misuse. The user/operator and not the manufacturer will be liable for any damage or injuries of any kind caused as a result of this.

Please note that our equipment has not been designed for use in commercial, trade or industrial applications. Our warranty will be voided if the machine is used in commercial, trade or industrial businesses or for equivalent purposes.

GENERAL SAFETY .....	<b>4-5</b>
SAFETY SYMBOLS .....	<b>6-7</b>
FOR SAFE OPERATION .....	<b>8-10</b>
WHAT'S IN THE BOX? .....	<b>12-13</b>
PRODUCT FEATURES .....	<b>14-15</b>
PRE-OPERATION .....	<b>16</b>
ASSEMBLY .....	<b>17-24</b>
OPERATION .....	<b>25-33</b>
MAINTENANCE .....	<b>34-36</b>
TROUBLESHOOTING .....	<b>37</b>
SPECIFICATION .....	<b>38</b>
GUARANTEE .....	<b>39</b>
DECLARATION OF CONFORMITY .....	<b>40</b>

- **READ THIS MANUAL CAREFULLY BEFORE USING THIS MACHINE.**
- **KNOW HOW** to stop the unit and reduce pressure immediately. Be completely familiar with the controls.
- **CAUTION!** Never use this machine if it has been damaged or is in need of replacement parts.
- **ALWAYS** use eye and ear protection.
- **NEVER** operate this machine when you are fatigued, ill or under the influence of alcohol, drugs or medication.
- **ALWAYS** wear heavy, long trousers, boots and gloves suitable for the job.
- **DO NOT** wear loose clothing, jewellery short trousers, sandals or use when barefoot, and secure long hair.
- **ALWAYS** Keep good footing and balance at all times – do not overreach or stand on an unstable support.
- **ALWAYS** have adequate drainage to reduce the possibility of a fall due to slippery surfaces.
- **NEVER** perform maintenance or assembly procedures on this machine when the engine is running.
- **NEVER** touch the electrical plug with wet hands.
- **NEVER** let electrical connections rest in water.
- **NEVER** operate the pressure cleaner while standing in water.
- **NEVER** point the high-pressure nozzle at people or animals.
- **NEVER** operate pressure cleaner without the water turned on.
- **NEVER** use hot water with this pressure cleaner.
- **ALWAYS** watch out for children, pets, wildlife and always check the working area is safe before proceeding work
- **DO NOT** allow children to operate the pressure cleaner at any time.

 For safe operation and maintenance symbols are moulded in relief on the machine or shown on a label.



**WARNING**

To reduce the risk of injury, user must read instruction manual.



**GLOVES**

Gloves should be worn where appropriate.



**EYE & EAR PROTECTION**

Approved eye & ear protection should be worn at all times during operation.




**BOOTS**

Wear sturdy, non-slip boots.



**CLOTHING**

Appropriate clothing should be worn during operation. Ensure clothing is made of strong fabric and is not baggy or loose.

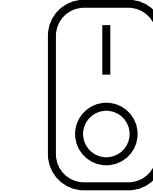

**ON**

**OFF**



**LOCKED**



**UNLOCKED**

## SAFETY SYMBOLS



**WARNING!** To reduce the risk of injury, user must read instruction manual.



**DANGEROUS VOLTAGE**



**WARNING!** Never to touch the spark plug or plug cord while the engine is in operation. Doing so may result in being subjected to an electrical shock.



**DO NOT** Expose to rain or use in damp locations




This symbol, before a safety comment, indicates a **PRECAUTION**, a **WARNING** or a **DANGER**. Ignoring this warning can lead to an accident for yourself or for others. To limit the risk of injury, fire, or electrocution always apply the recommendations indicated.



**WARNING!** Never point the gun to human, animals, the machine body, power supply or any electric appliances



**KEEP BY STANDERS AWAY.**

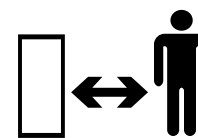

**WARNING!** Use of this product can pose a danger to wildlife. Check areas, particularly long grass and under bushes for signs of life if necessary relocate.

**NOTE:** Not all animals will be deterred by the noise of the product alone.




To reduce the risk of injury, never direct a water stream towards people or pets or place any body part in the stream. Leaking hoses and fittings are also capable of causing injury.


**DO NOT** hold hoses or fittings.



Machine not intended to be connected to the potable water mains

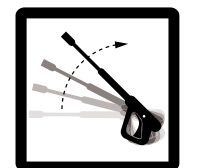


Reduce the risk of injury from kickback, hold the spray lance securely with both hands when the machine is on.

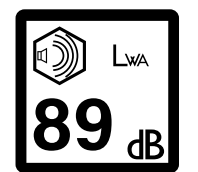

**GUARANTEED SOUND POWER LEVEL**


## SAFETY SYMBOLS

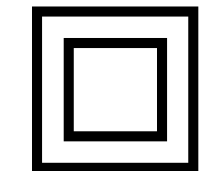


A double-insulated product is marked with the words "double insulation" or "double Insulated". No means of grounding is provided on a double-insulated product, nor should a means for grounding be added to the product. Servicing a double-insulated product requires extreme care and knowledge of the system, and should be done only by qualified service personnel.



**CONFORMS TO CURRENT SAFETY STANDARDS**

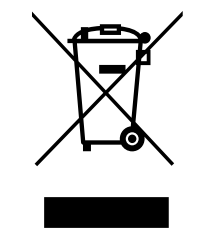


**WASTE ELECTRICAL PRODUCTS SHOULD NOT BE DISPOSED OF WITH HOUSEHOLD WASTE. PLEASE RECYCLE WHERE FACILITIES EXIST CHECK YOUR LOCAL AUTHORITY OR RETAILER FOR RECYCLING ADVICE**

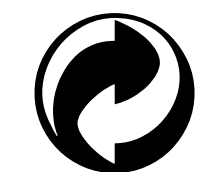


Recycle unwanted materials instead of disposing of them as waste. All tools, hoses and packaging should be sorted, taken to the local recycling centre and disposed of in an environmentally safe way.

## FOR SAFE OPERATION


### PROPER USE OF THE ELECTRIC PRESSURE WASHER

 **WARNING!** - This unit is intended for use with cold water only! Do not use hot water in this pressure washer.

- Operate the pressure washer at no more than the fluid pressure rated for the pressure washer. Never run the pressure washer without water supply. Running the unit without a water supply will cause irreparable damage to the unit.
- Make sure that the water supply you use for the pressure washer is not dirty, sandy, and does not hold any corrosive chemical products. Using a dirty water supply will compromise the long life of the pressure washer.
- NEVER move the unit by pulling on the high pressure hose. Use the handle provided on the top of the unit.
- Always hold the high pressure gun and lance with two hands. Keep one hand on the gun/trigger, while supporting the lance with the other hand
- When dispensing detergent, the pressure washer applies detergent to the cleaning area at low pressure only. Once the detergent has been applied, spray the detergent off of the work area by using the adjustable nozzle.

 **CAUTION** - The pressure washer can be used for a variety of applications including washing cars, boats, patios, decks, etc. where high

pressure is necessary to remove dirt and debris. High-pressure water flow can damage the work surface if not used properly! Always test the spray in an open area first.


 **WARNING!** - DO NOT tamper with or adjust the safety valve setting. The safety valve is also a pressure limiting valve.

- When the gun trigger is released, the valve opens, the pressure switch is activated, the machine will automatically shut down.
- If the gun nozzle is blocked, it will cause the unit pressure to rise, the safety valve will open, the pressure switch is activated, the unit automatically shuts down.

### USE OF EXTENSION CORDS


Use of an extension cord with this product is not recommended. If you must use an extension cord, use only extension cords that are intended for outdoor use. These cords are identified by a marking "acceptable for use with outdoor appliances, store indoors while not in use." Use only extension cords having an electrical rating not less than the rating of the product. Examine extension cord before use. Do not use damaged extension cords! Do not pull on cord to disconnect from receptacle, always disconnect by pulling on plug. Keep cord away from heat and sharp edges. Always disconnect the extension cord from the receptacle before disconnecting the product from the extension cord.

## FOR SAFE OPERATION

 **WARNING** - Unsuitable extension cables can be dangerous, if an extension cable is used, it must be suitable for outdoor use and the connection must be kept dry and off the ground. If an extension cord is used, the plug and socket must be waterproof. Use of a power cable reel which keeps the socket at least 60mm above the ground is strongly recommended.


### IMPORTANT SAFETY PRECAUTIONS


Failure to follow all Safety Rules and Precautions can result in serious injury. Read the instruction manual carefully until you completely understand and can follow all warnings and safety rules before operating the unit. Restrict unit to users who understand and will follow all warnings and safety rules in this manual


 **WARNING** - When using this product, basic precautions should always be followed, including the following:

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The unit must not be used by children. Children should be supervised to ensure that they do not play with the appliance.
- This machine must not be used by persons (including children) with reduced physical, sensory or mental skills or lack of experience and knowledge.

- This machine can be used by persons with reduced physical, sensory or mental abilities or lack of experience and knowledge when they are supervised or safe use of the machine and the resulting dangers are understood.
- Use suitable personal protective equipment (PPE) for high-pressure cleaners in operation, Eg safety shoes, protective gloves, protective visors, hearing protection, etc. when operating the appliance.

 **WARNING** - Danger of recoil forces and the suddenly occurring torque on the nozzle when the spray gun is opened.


 **WARNING** - This unit has been developed for the use of the detergent supplied or recommended by the manufacturer. The use of other cleaning agents or chemicals can affect the safety of the unit.

 **WARNING!** - High pressure jets can be dangerous if used improperly. The jet must not be directed at persons, active electrical equipment or the unit itself.


- Do not use the appliance with people within its range of action unless they are wearing protective clothing.
- Do not point the jet at yourself or others to clean clothing or footwear.
- Disconnect the power supply before carrying out maintenance.
- High pressure cleaners must not be operated by children or unskilled persons.

## FOR SAFE OPERATION

- To ensure the units safety, only use original spare parts from the manufacturer or use spare parts approved by the manufacturer.
- Do not use the appliance if a power cable or important parts of the appliance are damaged.

 **WARNING** - Do not use the machine if a connecting cable or important parts of the machine are damaged, Eg safety devices, high pressure hoses, spray gun.

- The machine is not suitable for connection to portable water pipes.
- Connect the machine to the mains water supply.
- Use the machine on a flat surface.
- Before use, make sure that the inlet and the nozzle are not blocked.
- After use, make sure there is no water in the pump and hose.
- When the nozzle is blocked or the high pressure hose is knotted, the overload protection function automatically activates and the machine is switched off.
- After solving the fault, the machine can be turned back on.

 **WARNING!** - When using this product, basic precautions should always be followed, including the following:

- Intended for outdoor household use only.
- Do not use a damaged high pressure hose.
- Do not use near combustible materials, combustible fumes, or dust.

- Some chemicals or detergents may be harmful if inhaled or ingested causing severe injury. Use a respirator or mask whenever there is a chance that vapors may be inhaled. Read all instructions included with the mask so you are certain the mask will provide the necessary protection against inhaling harmful vapors.
- Before starting the pressure washer in cold weather, check all of the parts of the equipment and be sure that ice has not formed. Do not store the unit anywhere that the temperature will fall below 0 C (32 F).
- Do not make any modifications to any of the components!
- Units with broken or missing parts, or without the protective housing or covers should NEVER be operated.
- Keep the high-pressure hose connected to the pressure washer and the spray gun while the system is pressurized. Disconnecting the hose while the unit is pressurized is dangerous, and may cause injury.
- Do not leave the pressure washer unattended while ON.
- Keep water spray away from electrical wiring or fatal electric shock may result.
- Remove the plug from the socket-outlet during maintenance.

**THIS PAGE HAS INTENTIONALLY BEEN LEFT BLANK**



WHAT'S IN THE BOX



MAIN BODY  
(PEPW-2500)



GRIP  
HANDLE



GUN



HIGH PRESSURE  
HOSE



HOSE  
REEL



HOSE REEL  
BRACKETS



GUN / LANCE  
HOLSTER



STORAGE  
HOOK



LANCE

ACCESSORIES  
HOLDER



HOSE REEL  
HANDLE




SCREWS  
x8



HOSE  
CLIP



INLET  
FILTER

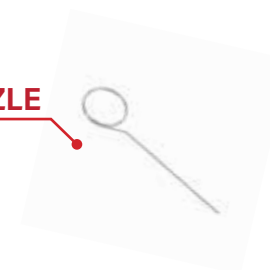


NOZZLE  
PIN

WHAT'S IN THE BOX

## PRODUCT FEATURES



## PRODUCT FEATURES

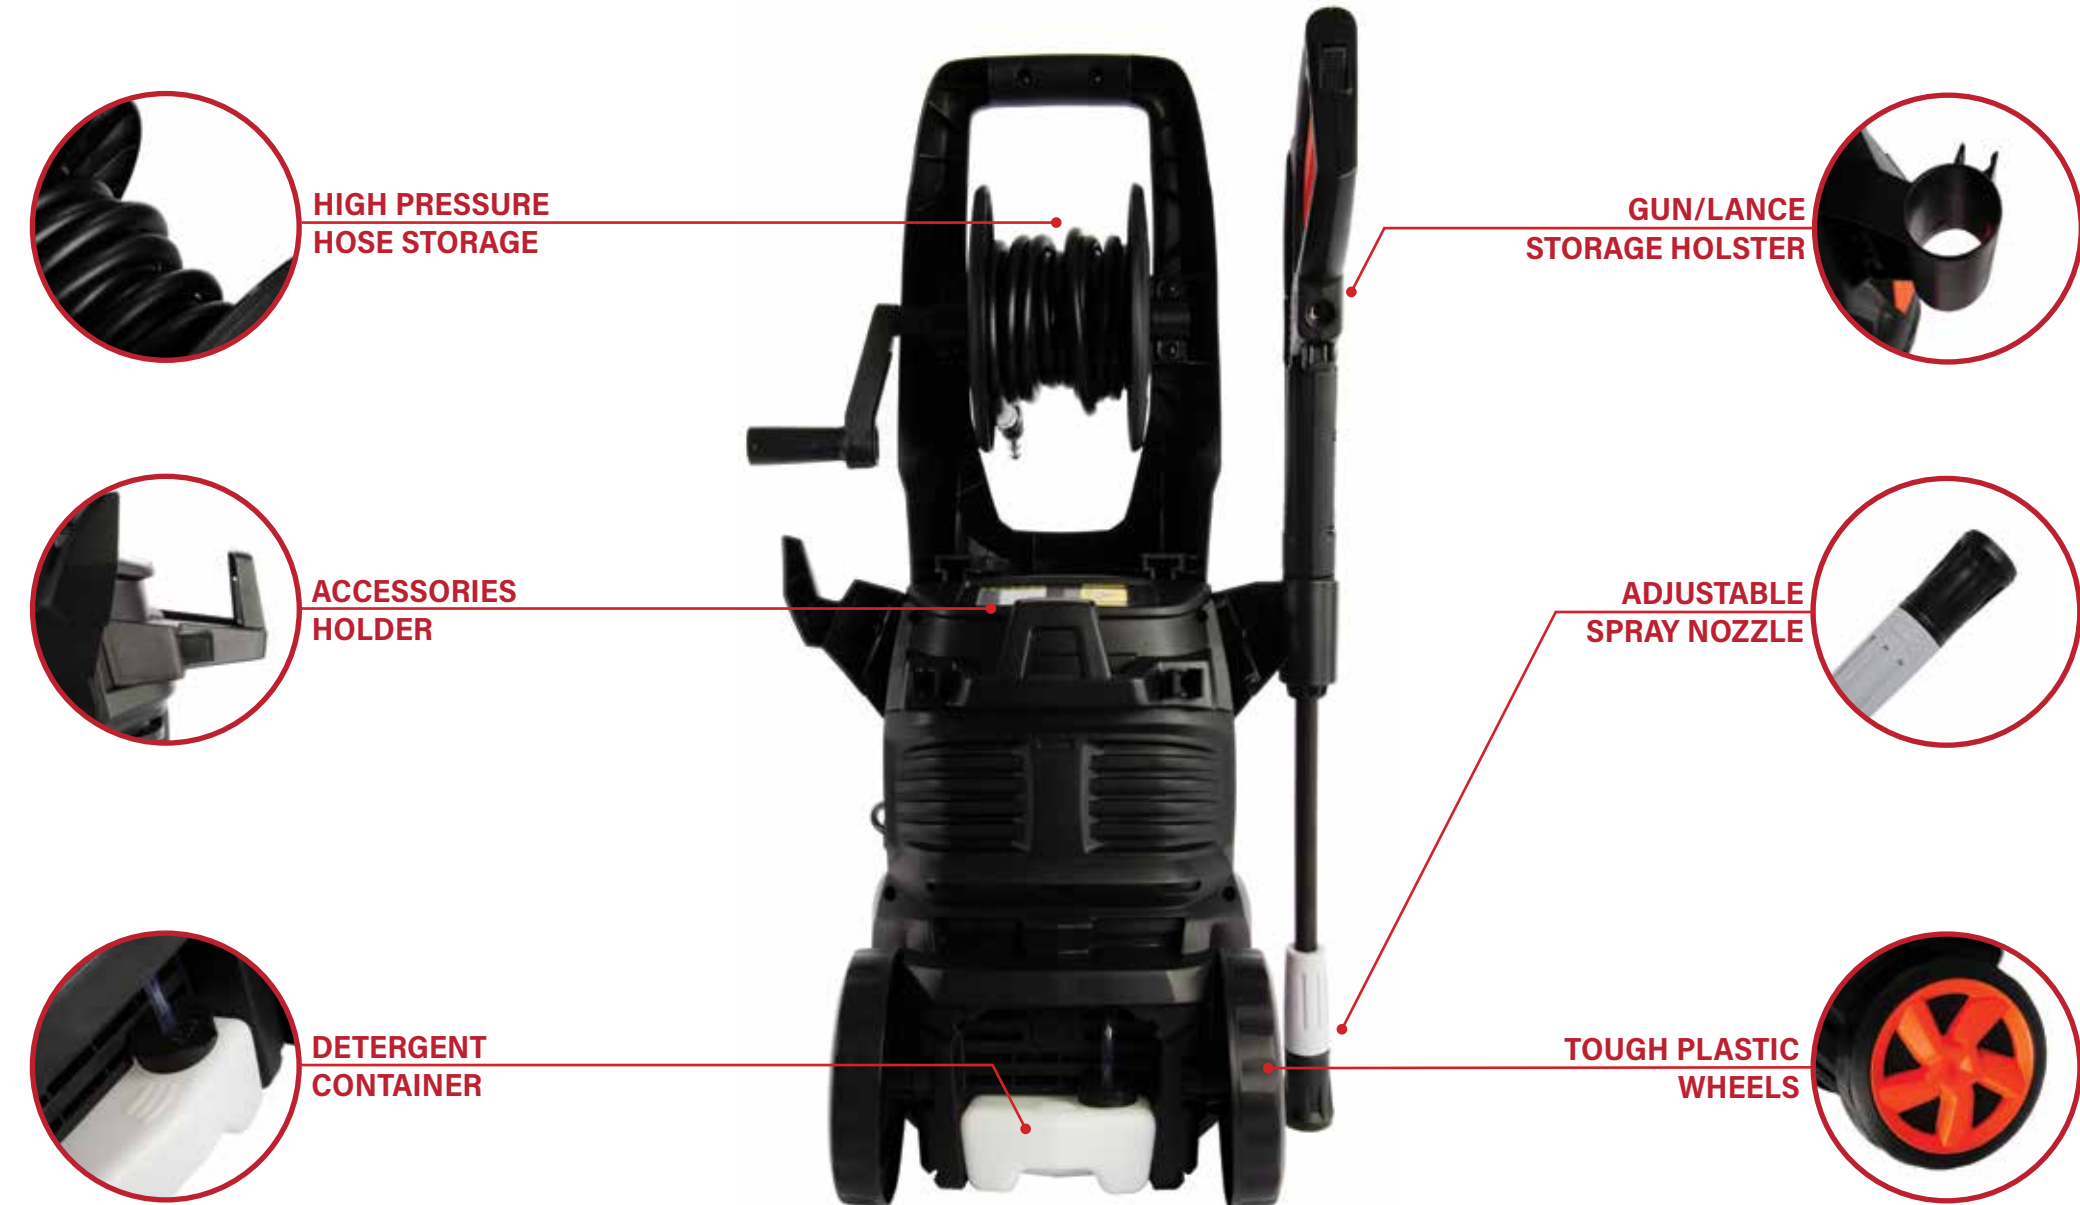



1

## INSPECT PRESSURE WASHER



Check the Pressure Washer is not damaged and all components are in good working order before use. Regular periodic inspection is required to ensure the Pressure Washer is suitable for the task.

Before using the Pressure Washer a risk assessment should be carried out respecting the legislation in the country of use.



Fully inspect pressure washer before use. Ensure all correct parts are supplied with the product. If any parts are missing/damaged or for support contact ParkerBrand customer services directly on **01507 499198**.

1

## ATTACH ACCESSORIES HOLDER



Attach the accessories holder to the rear of the main body of the pressure washer.

2

## SECURE ACCESSORIES HOLDER



Secure the accessories holder to the rear of the main body of the pressure washer with the screws provided.

**1** ATTACH GRIP HANDLE



Slide the grip handle on to the main body of the pressure washer.

**2** SECURE GRIP HANDLE



Secure the grip handle on to main body of the pressure washer with the screws provided.

**1** ATTACH GUN / LANCE HOLSTER



Attach the Gun / Lance Holster by sliding it on to the securing tab located on the left hand side of the machine.

Push the Gun / Lance Holster on to the securing tab until it clicks in to place.

**2** ATTACH POWER CORD HOOK



Attach the Power Cord Hook by sliding it on to the securing tab located on the right hand side of the machine.


Push the Power Cord Hook on to the securing tab until it clicks in to place.

**3** USING HOLSTER & HOOK




The Gun / Lance Holster and Power Cord Hook help keep the pressure washer in good order. Utilise the storage both when in use and when storing the machine for any period of time.

**1** FIT HOSE REEL BRACKETS

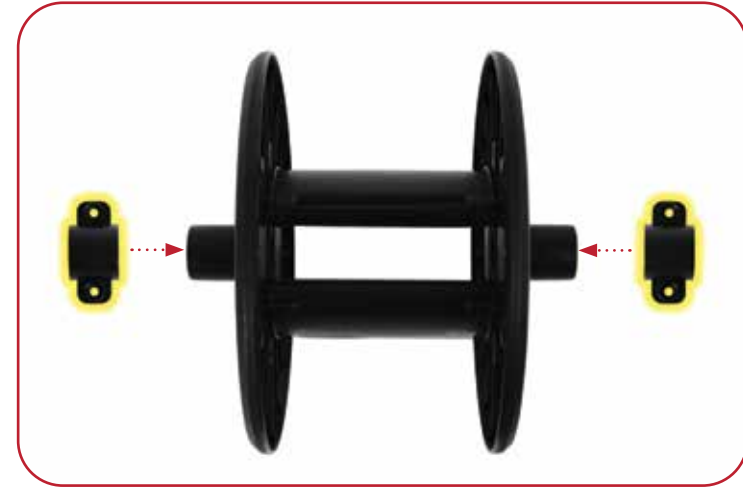


Slide the Hose Reel Brackets on to the Hose Reel.

**2** ASSEMBLE HOSE REEL HANDLE

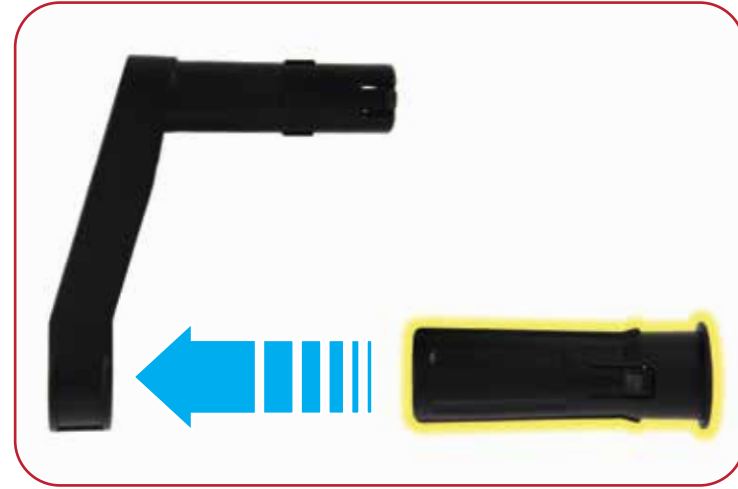

Push the Hose Reel Handle through the Hose Reel Handle Crank. The Hose Reel Handle will snap in to place.

**3** ATTACH HANDLE TO REEL

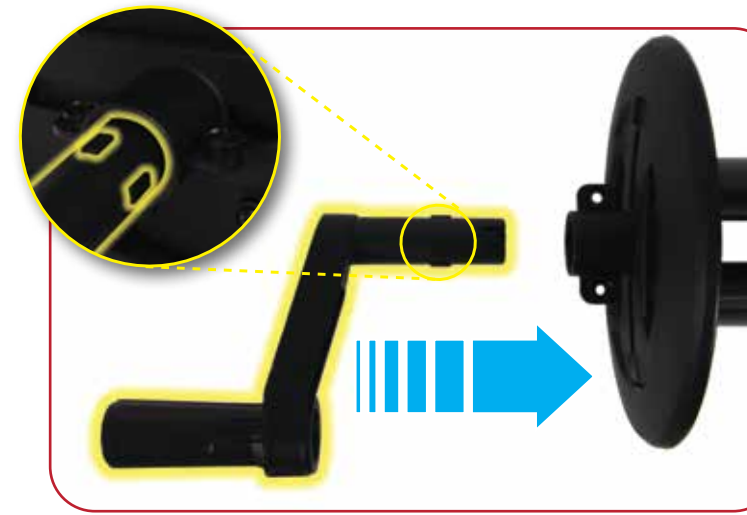

Attach the assembled Hose Reel Handle to the hose Reel. Slide the Handle in to the Hose Reel centre hole

Be careful to align the 4 lugs on the handle to the spaces on the Hose Reel. Slide the Handle in to the Hose Reel until it snaps in to place.

**4** SECURE HOSE REEL



Secure the assembled Hose Reel on to the Grip handle by utilising the provided screws.




Follow the hose reel assembly guide closely, follow each step to ensure correct fitment at the first attempt.

**1** GUN & LANCE



Locate the Gun and Lance for the pressure washer. The gun and lance needs to be assembled correctly before use of the machine can commence.

**2** ATTACH GUN & LANCE

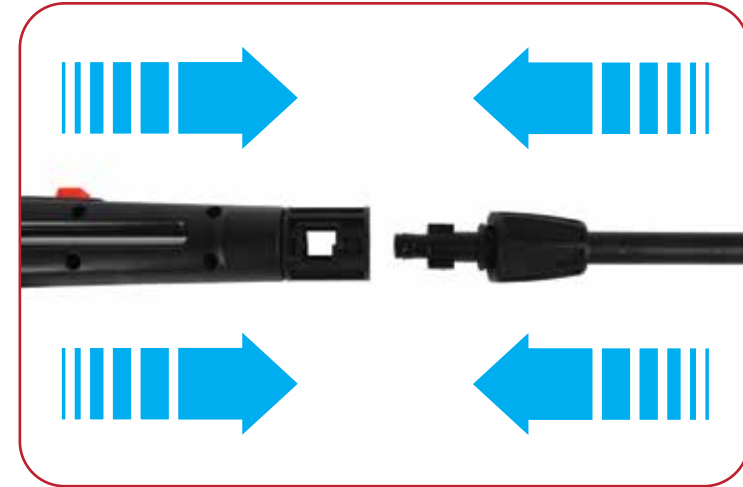

Attach the Gun and Lance. The gun is spring loaded so there will be slight resistance when attaching the Lance.

**3** TWIST & LOCK



Twist and lock the Lance in to place. Make sure the locking lug on the Lance is in the correct position within the Gun.

**4** ASSEMBLED GUN & LANCE



Once the Lance is attached to the gun it is ready to be used with your pressure washer.



**WARNING!** If the lance is not locked in place correctly it can become loose during use.  
**WARNING!** Due to high pressure a loose lance can become a projectile potentially cause injury/Damage.

### 1 ATTACH HIGH PRESSURE HOSE



Attach the high pressure hose to the pressure washer water outlet. Ensure that the hose is connected properly to prevent any leaks and full pressure can be achieved.

### 2 ATTACH HIGH PRESSURE HOSE TO GUN



Attach the high pressure hose to the gun. Ensure that the hose is connected properly to prevent any leaks and full pressure can be achieved.



Always connect the high pressure hose when the machine is Off(0)

### 1 STARTING THE MACHINE



1. Make sure that the power switch is in the 'Off'(0) position.

2. Ensure the high pressure hose is connected to both the machine and the gun correctly.

3. Connect the garden hose to the water inlet fitting.

4. Open the water supply valve completely.

5. Before turning the unit on, press the gun trigger to bleed all the remaining air out of the pump and hose.

6. Start the pressure cleaner by turning the on/off switch to the 'On'(I) position and squeeze the trigger.




Ensure all assembly instructions have been followed and carried out correctly. Be aware the motor does not run continuously, only when the trigger is squeezed.



1

## STOPPING THE MACHINE

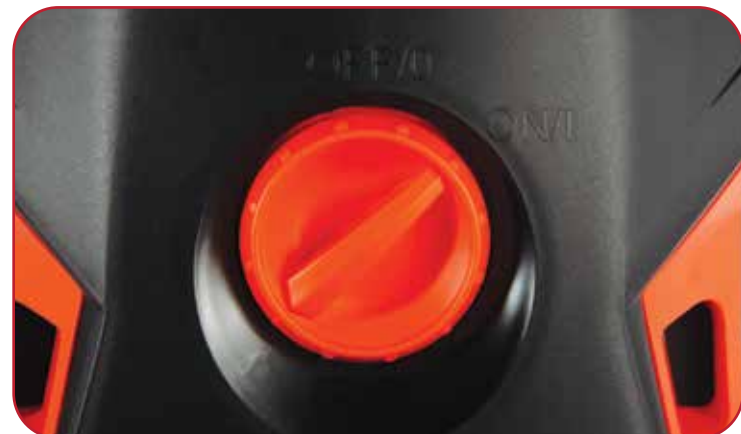

1. Turn the power switch to the 'Off'(0) position.
2. Turn off the water supply.
3. Discharge the high-pressure water left in the machine.
4. Disconnect high-pressure hose from the pressure washer and gun.
5. Disconnect garden hose from the water inlet
6. Drain detergent reservoir and flush with running water.
7. Drain any remaining water from inlet and outlet fittings.
8. Engage the gun safety lock.



Wipe away any remaining water on all parts and fittings  
Failure to follow the above instructions may cause damage to the machine

1

## SQUEEZE TRIGGER



Squeezing the trigger whilst the machine is on will activate the pressure washer and release a high pressure jet of water.

2

## RELEASE TRIGGER



To stop the flow of the high pressure water jet simply release the trigger.



High pressure jets are dangerous if subject to misuse.  
The jet must not be directed at persons, animals, live electrical equipment or the appliance itself.  
Do not direct the jet against yourself or others in order to clean clothes or foot-wear.

**1** SAFETY LOCK ON




This pressure washer is equipped with a gun trigger safety lock. To lock the trigger push the safety lock button into the 'Locked' position. Always lock the trigger when not in use.

**2** SAFETY LOCK OFF



To unlock the trigger push the safety lock button into the 'Unlocked' position. Only unlock the trigger when you are ready to use the machine.


 When not in use always use the safety lock to prevent accidentally engaging the high pressure spray.

**1** ADJUSTABLE SPRAY NOZZLE



The adjustable nozzle will allow you to use any variety of spray patterns from a full fan spray to a direct stream spray. Adjust the spray nozzle by turning it in the directions displayed on the nozzle itself

**2** DIRECT STREAM

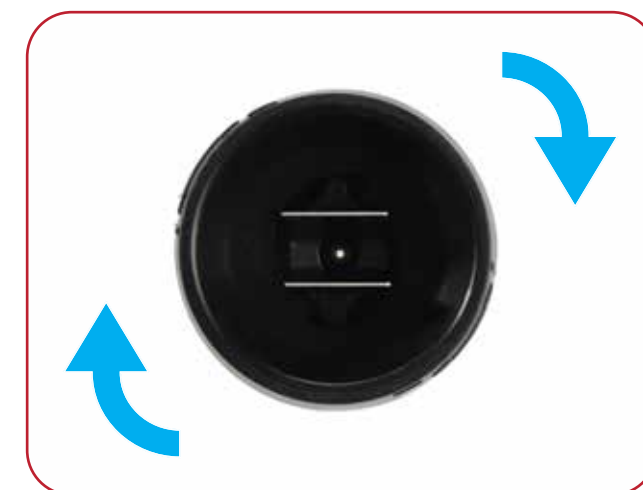


Fully turn the adjustable nozzle in a clockwise direction to achieve a direct stream from the pressure washer.

**3** FAN SPRAY



Fully turn the adjustable nozzle in an anti-clockwise direction to achieve a fan spray from the pressure washer.

 When using the pressure washer to clean wood decks, siding, vehicles etc., always start using the fan spray. Spray from a minimum of 36" (36 Inches) away to avoid damaging the surface of the material you are cleaning.

1 UNLOCK GUN ANGLE



Slide the button to "unlock", to access the rotating function on the gun.

2 ROTATE GUN



Rotating the gun will adjust the cleaning angle, to help the user find the most comfortable and efficient cleaning position possible.

3 LOCK GUN ANGLE



Slide the button to "lock" to secure the gun in the position required.

1 USING DETERGENTS



The built-in detergent dispenser will allow you to apply many forms of liquid detergent onto the work surface. The detergent dispenser tank can be found at the rear of the machine.

2 REMOVE TANK



Remove the cap on the detergent tank and remove from the machine. Fill with liquid detergent only, do not put any water into the tank. The pressure washer will mix water and detergent automatically.




Detergent will only dispense when the lance is in the low pressure position. Do not add water to the detergent tank, only add liquid detergent, water will be mixed automatically.

**1** ADJUST PRESSURE



Adjust the pressure by rotating the nozzle in either direction indicated on the side of the nozzle.

**2** PRESSURE SETTING

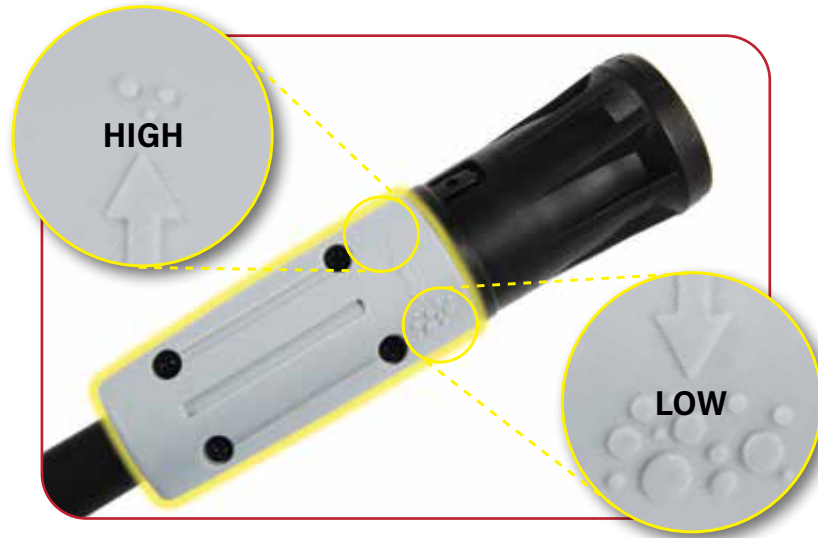

The machine will only dispense the detergent in the tank when in the lance is in the low pressure position. To disperse any detergent from the working surface select the high pressure position.

**!** Never use products with bleach or chlorine or any other corrosive materials, including liquids containing solvents (i.e. gas, oils etc), tri-sodium phosphate products, ammonia, or acid-based cleaners. These chemicals will harm the unit and cause damage to the surface being cleaned. always read the label.

**1** DISCONNECT HOSE FROM GUN



To disconnect the high pressure hose from the gun press the hose release button. The high pressure hose should easily disconnect from the gun.

**2** DISCONNECT HOSE FROM MACHINE



To disconnect the high pressure hose from the machine slide the hose release button to the left. The high pressure hose should easily disconnect from the machine.

**!** Never disconnect the high pressure hose whilst the machine is in use. When disconnecting the hose ensure the machine is Off (0) and all pressure is purged from the machine



## MAINTENANCE

### 1 UNBLOCK LANCE




Check the Nozzle jet regularly to ensure that there are no blockages or built up residue.

### 2 INSERT NOZZLE PIN



Clean the Nozzle jet by inserting the Nozzle Pin into the Nozzle Jet.

### 3 DISLodge BLOCKAGES

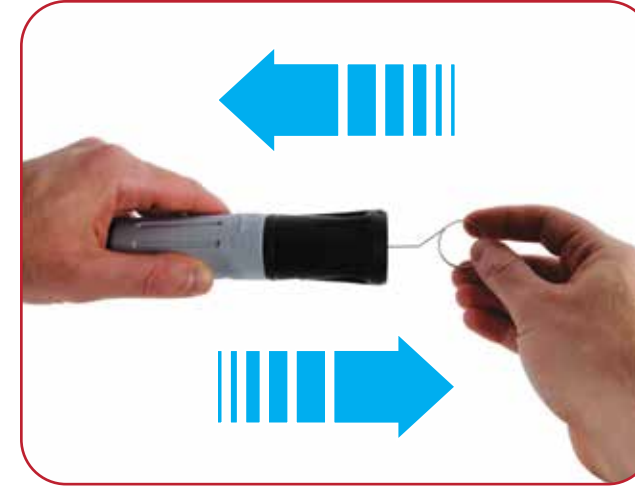

Move the Nozzle pin back and forth whilst inserted into the Nozzle Jet. This will help rid the jet of any deposits that may have built up during use.



When the Nozzle gets blocked it will cause the pump to build pressure and may cause the unit to surge damaging the machine. Only attempt to clear the Nozzle when the machine is Off(0) and has been fully purged of any pressure.


## MAINTENANCE

### 1 WATER INLET



The water inlet must be inspected regularly to avoid blockages.


### 2 INLET RUBBER SEAL

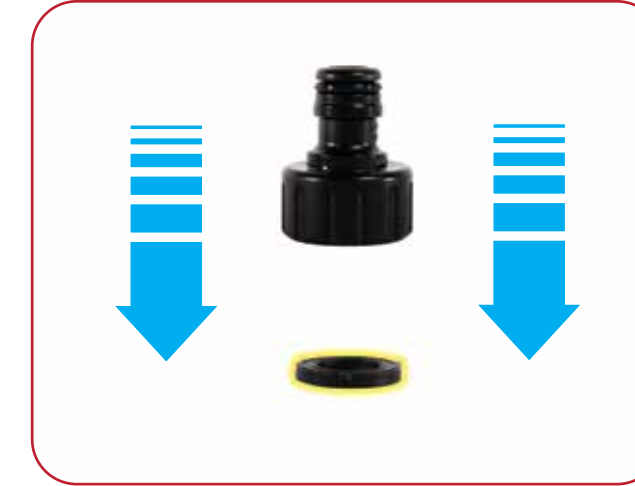

Remove the water inlet and inspect.

Remove the rubber seal and clean any residue from the seal and Inlet that may have built up during use.

### 3 INLET FILTER

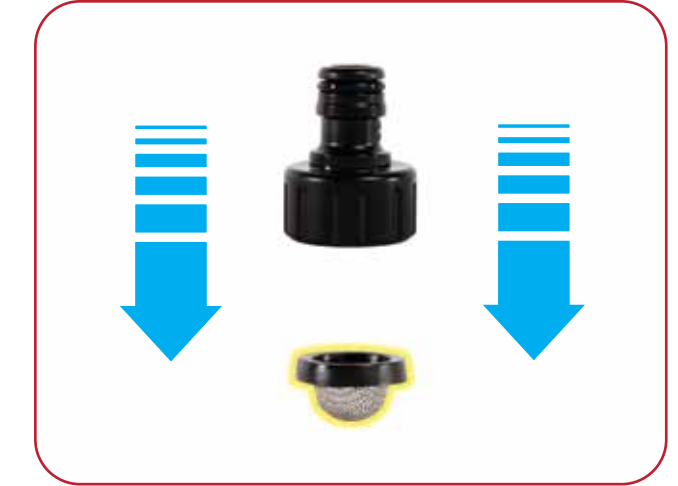

If using the inlet filter, remove the filter and clean any residue from the filter and Inlet that may have built up during use.



A blocked water inlet can restrict water supply to the pump which in turn can damage the machine. You can not use the inlet rubber seal and filter at the same time. Remove the rubber seal if you wish to use the filter.



CLEAN - UP AND STORAGE

**i** SHUTTING DOWN AND STORING THE PRESSURE WASHER

- Turn the pressure cleaner to the OFF(0) position.
- Turn off the water supply.
- Before disconnecting high-pressure hose connection, point the gun in a safe direction and discharge the high-pressure water.
- Disconnect high-pressure hose from the pressure cleaner and gun.
- Disconnect garden hose from the pressure washer.
- Remove quick coupler fitting from garden hose and attach to the nipple portion of the fitting installed on the pressure cleaner for storage.
- Remove excess water from the pump by tipping the unit on both sides to drain any remaining water from inlet and outlet fittings.
- Remove Water Intake and flush with water to remove dirt or debris. Return filter once cleaned.
- Drain detergent reservoir and flush with running water.
- Wipe away any remaining water on all parts and fittings.
- Engage the gun safety lock.
- Store the pressure washer, parts, and accessories in an area with a temperature above 0 C (32 F).

WINTERIZING AND LONG-TERM STORAGE

Follow all of the above shut-down procedures, adding the following steps:-

- After disconnecting the water supply, and before disconnecting the high-pressure hose, turn the pressure cleaner on for 2-3 seconds, until any remaining water in the pump exits.

**!** **WARNING** - DO NOT run the machine for too long. Continued use of the pressure washer without water supply attached will cause severe damage to the unit!

- Always store the pressure cleaner, parts, and accessories in an area with a temperature above 0° C (32° F).

**!** **WARNING** - Failure to comply with these storage instructions will result in damage to the pump assembly.

**i** MAINTENANCE

**!** **WARNING!** Before performing any maintenance on this machine, turn the power switch to Off(0) and unplug from the mains.

- This pressure washer is supplied with a closed lubrication system, so no addition of oil is needed.
- Check all hoses and accessories for damage prior to use.
- Check the water inlet periodically for deposits. Clean this regularly for maximum performance.

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
<b>Machine will not start when power switch is in the 'On(I)' position</b>	<i>Power socket is faulty</i>	Check plug, socket, fuses.
	<i>Voltage is inadequate</i>	Check whether the voltage is adequate
	<i>Power cord is not plugged in.</i>	Plug power cord in.
<b>Pump does not reach adequate pressure / Power fluctuates</b>	<i>Water inlet is clogged.</i>	Remove and clean inlet.
	<i>Pump is drawing air.</i>	Tighten connections / bleed system
	<i>Suction valves are clogged/worn.</i>	Clean or replace valves.
	<i>Diameter of garden hose is too small.</i>	replace with 3/4 inch garden hose.
	<i>Water supply is restricted.</i>	Check hose for kinks or leaks.
<b>Will not maintain pressure</b>	<i>Insufficient water supply.</i>	Fully open water source.
	<i>Excessive air in waterline and pump.</i>	Turn unit and water supply off / Bleed system / Hold trigger down..
<b>Excessive noise</b>	<i>Intake is blocked.</i>	Check intake valves.
	<i>Valves are worn, dirty or clogged.</i>	Check, clean or replace valves
	<i>Filter is dirty.</i>	Check, clean or replace filter
<b>Machine cuts out during use</b>	<i>Net voltage lower than suggested.</i>	Check whether the voltage is adequate.

SPECIFICATION		
Model -	PEPW-2000	PEPW-2500
Rated voltage -	AC220-240V ~ 50Hz	AC220-240V ~ 50Hz
Rated power -	2000 W	2500 W
Rated pressure -	110 bar	130 bar
Max. pressure -	160 bar	195 bar
Rated flow -	6.5 L/min	7.0 L/min
Max. flow -	7.5 L/min	7.8 L/min
Max. water inlet pressure -	1.2 MPa	1.2 MPa
Max. water inlet temperature -	50°C	50°C
Vibration value (K=1.5/s <sup>2</sup> ) -	≤2.5 m/s <sup>2</sup>	≤2.5 m/s <sup>2</sup>
Weight -	8.5kg	8.9kg

\*All measurements are approximate.  
If you require further information please contact ParkerBrand directly

Your machine has been made and assembled with care. In view of this, Parker Products Ltd guarantees your product against defective material or damage for period of a minimum of 12 months from the date of purchase. A proof of purchase must be provided with the product.

If any fault is caused by defective materials or the quality of the build, repair will be carried out free of charge. However, this guarantee does not apply in the case of normal wear and tear. This includes items such as recoils, starting mechanisms, spools, carburettors, blades and the like. Please go to [www.parkerbrand.com](http://www.parkerbrand.com) in order to view the full warranty terms and exemptions from the warranty. Any damage caused by misuse, accident or any repair from an unauthorised agency is absolutely not covered by our warranty.

In case of any fault please contact us directly or return the product to us, Parker Products Ltd, or an authorised repair agent. You can find all contact information on the ParkerBrand website.

In order for you to affect your guarantee you must provide proof of purchase in the form of a dated receipt or invoice within the 12-month period of purchase. If repairs are outside of the warranty period, a quote will be made accordingly.

## DECLARATION OF CONFORMITY

### Description & Function:

Electric Pressure Washer  
Rated voltage: 220-240v  
Rated frequency: 50Hz  
Rated power: 2000W / 2500W  
Max. pressure: 160 bar / 195 bar

### Model/Type:

PEPW-2000 / PEPW-2500

### Manufacturing Date/Serial Number:

2021

### Conforms to the following Directives:

- 2006/42/EC Machine Directive (MD)
- 2006/95/EU Low Voltage Directive (LVD)
- 2014/30/EC EU Electromagnetic Compatibility Directive (EMC)
- Noise & Vibration ISO 3744 & ISO5349

### Imported and distributed by:

Parker Products Ltd.  
Richmond Park, Richmond Road,  
Louth, LN11 0FU

**Telephone:** 01507 499198

**Email :** info@parkerbrand.co.uk

**Web:** www.parkerbrand.co.uk

### Conforms to the requirements of the Directives, as indicated, and the following harmonised standard(s):

- EN 60335-1:2012 / A2:2019
  - EN 60335-2-79:2012
  - EN 62233:2008
- Measured Sound Power Level - LwA: 87dB(A) / LwA: 87dB(A)  
Guaranteed Sounds Power Level - LwA: 89dB(A) / LwA: 89dB(A)

### Having been type examined to the requirements of the directives by:

TÜV SÜD Product Service LGA GmbH,  
Ridlerstraße 65, 80339 München,  
Germany.

**Notified body number:** 0123

**Certificate number:** M8A 093525 0022

### Technical file complied by:

Parker Products Ltd

Being the responsible person appointed by the manufacturer.

### Signed:



**Date:** 08/09/2021

**Name:** Jason Parker

**Position:** Managing Director

**THIS PAGE HAS INTENTIONALLY BEEN LEFT BLANK**



**PEPW-2000, 2500**